




## StreamPix Remote

Display live image from camera or pre-recorded video sequence remotely.

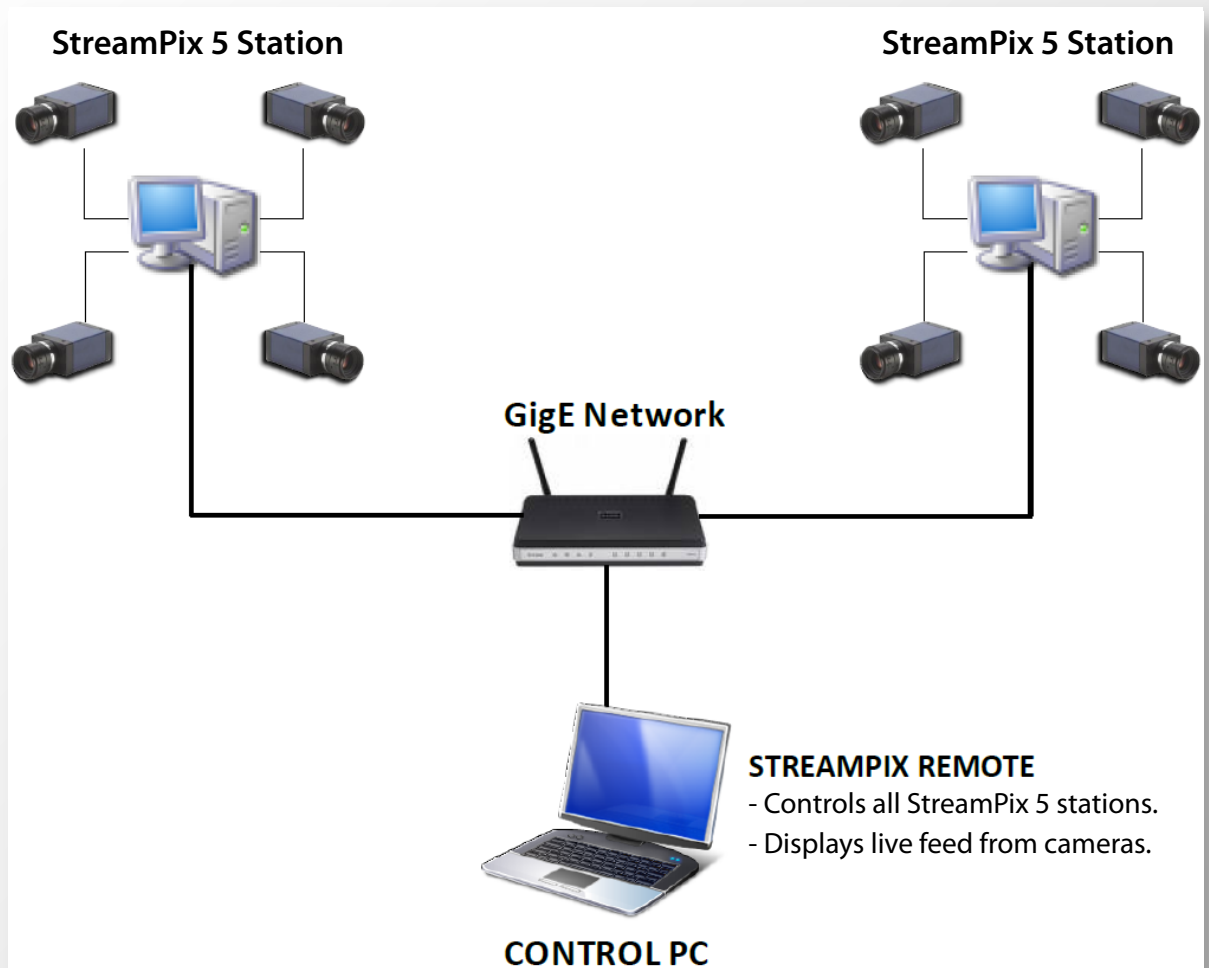

Watch and review multiple video streams at a distance from the recording PC.

### FEATURES:

Remotely view StreamPix 5 images (live feed or playback).

Remote control over the main features of StreamPix 5.

Create new remote session based on computer IP address and client (StreamPix 5 workspace) name.

Show real-time client status.

File history available for better management.

Efficient CPU usage and network traffic monitoring.

Sends notifications to a 3rd party UDP server application.



# NORPIX

Digital Video Recording Software

## StreamPix Remote - Status Information

Display live image from camera or pre-recorded video sequence remotely.

The screenshot displays the StreamPix Remote application window. The top menu bar includes Home, Server, Client, and Export. Below it is a toolbar with icons for Open, Close, New, Windows, Toolbars, Viewers, Layout, and Custom Features. A central toolbar contains playback controls like Play, Stop, Previous, Next, and a progress bar. On the left, a 'Clients' list shows eight cameras (Cam1 to Cam8) under the workspace 'LOREDAN'. The main area is a grid of eight video windows, each showing a live feed from a different camera angle of a horse race. At the bottom, a 'Status' table provides detailed information for each camera.

| Client Name (Workspace) | Recording | Playback | Camera | FPS  | Buffers (peak) | Dropped Frame(s) | Destination | Frames | Rec Pos | Play Pos | Timestamp | Start Ma |
|-------------------------|-----------|----------|--------|------|----------------|------------------|-------------|--------|---------|----------|-----------|----------|
| Cam1                    | No        | No       | Live   | 6.06 | 1 (1)          | No               | -           | 0      | 0       | 0        | -         | -        |
| Cam2                    | No        | No       | Live   | 6.06 | 1 (1)          | No               | -           | 0      | 0       | 0        | -         | -        |
| Cam3                    | No        | No       | Live   | 6.06 | 1 (1)          | No               | -           | 0      | 0       | 0        | -         | -        |
| Cam4                    | No        | No       | Live   | 6.06 | 1 (1)          | No               | -           | 0      | 0       | 0        | -         | -        |
| Cam5                    | No        | No       | Live   | 6.05 | 1 (1)          | No               | -           | 0      | 0       | 0        | -         | -        |
| Cam6                    | No        | No       | Live   | 6.06 | 1 (1)          | No               | -           | 0      | 0       | 0        | -         | -        |
| Cam7                    | No        | No       | Live   | 6.06 | 1 (1)          | No               | -           | 0      | 0       | 0        | -         | -        |

At the bottom of the interface, there are status indicators for CPU Usage (2%) and Network Usage (0%).

CPU Usage:

1%

Network Usage:

0%

Tools for monitoring system performance: CPU usage and network traffic.

### NorPix Inc.

1751 Richardson, suite 6117  
Montreal, QC H3K 1G6 Canada

Tech support: [support@norpix.com](mailto:support@norpix.com)

Technical support: 514-846-0009 ext: 27

Sales: [sales@norpix.com](mailto:sales@norpix.com)

Sales information: 514-824-2517

Ordering: 514-846-0009 ext: 23

Web: [www.norpix.com](http://www.norpix.com)