

POCKET LOCK (HDMI)

Included:

 
 
(1) HDMI cable



(1) M4 socket cap



M3 allen wrench

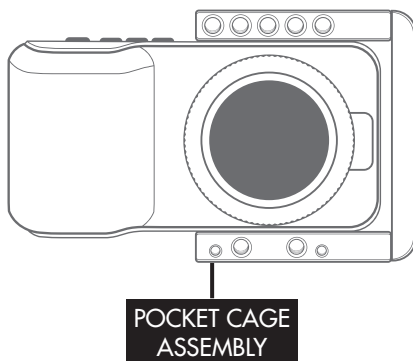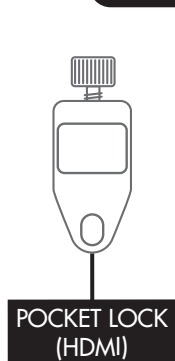

NOTE: POCKET CAGE assembly required.
See POCKET CAGE assembly instructions

INSTALLATION

1. Select **POCKET CAGE ASSEMBLY**, locate **SIDE PLATE**, ensure **M4 HOLES** are facing **CAMERA INPUTS**
2. Locate **M4 HOLE** next to **HDMI INPUT**
3. Select **HDMI CABLE** and insert into **POCKET LOCK (HDMI)** HOLE, do not tighten **THUMBSCREW**
4. Insert **HDMI CABLE** into **HDMI INPUT**
5. Align **POCKET LOCK (HDMI)** to **M4 HOLE** on **SIDE PLATE**, tighten **THUMB SCREW** to secure **HDMI CABLE**
6. Select **M4 SOCKET CAP**, tighten to **SIDE PLATE** with allen wrench

⚠ IMPORTANT
To prevent damage to camera, please follow steps 5 & 6 exactly as stated above

