


POCKET 15mm BASE

Included:

3/16 allen wrench


3mm allen wrench

(2) 1/4-20x3/8 socket cap

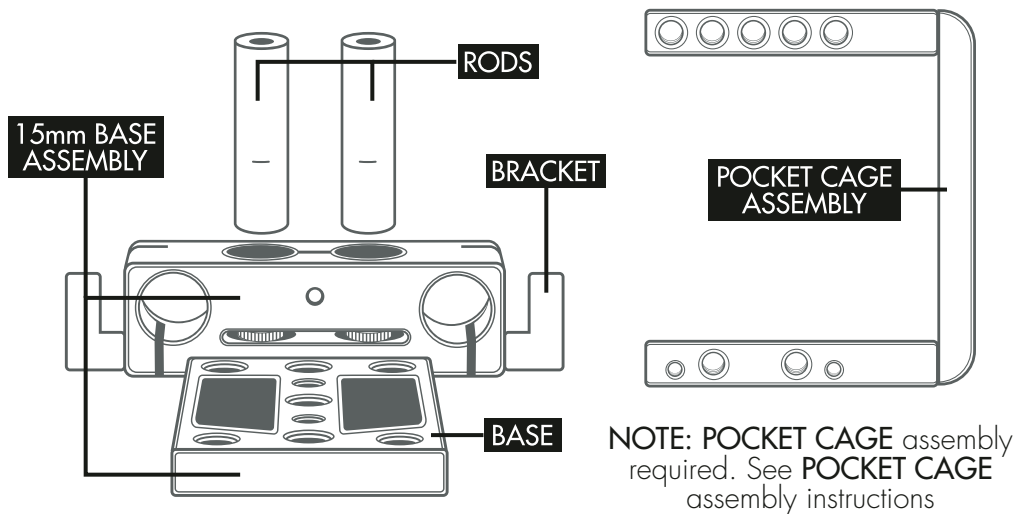

INSTALLATION

1. Locate **15mm RODS** and **SOCKET CAP SCREWS**
2. Locate both **1/4-20 HOLES** on **POCKET CAGE BOTTOM**
3. Align **ROD CAP HOLE** with first **1/4-20 HOLE** of **BOTTOM PLATE** of **CAGE ASSEMBLY**
4. Place **SOCKET CAP** inside **ROD**
5. Using **3/16 allen wrench** tighten **SOCKET CAP** and secure to **POCKET CAGE**
6. Repeat for second **ROD**

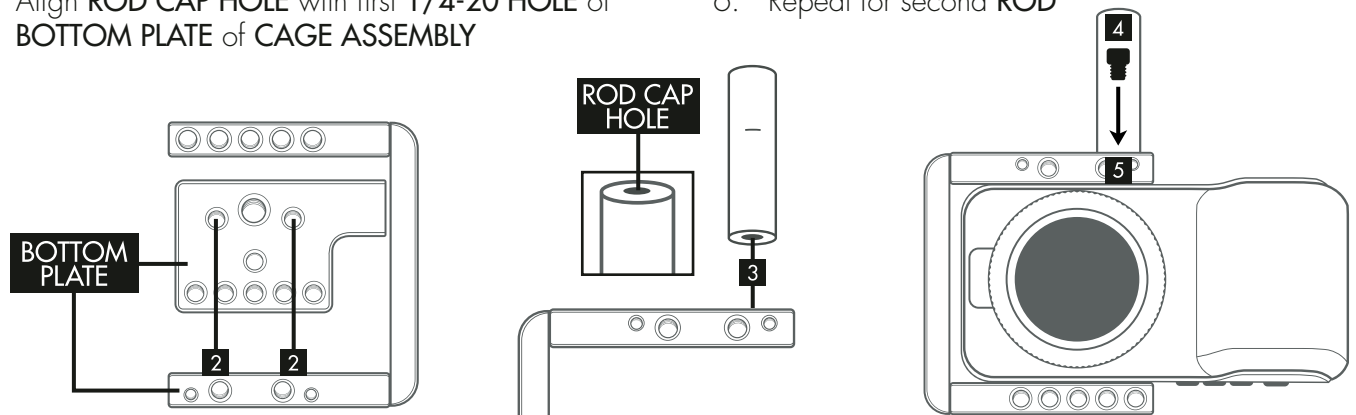

7. With both **RODS** attached locate **BRACKET**
8. With **MARKERS** facing forward slide **RODS** into **15mm HOLES**
9. Align **MARKERS** with top of **BRACKET** for proper lens height
10. Locate and tighten **BRACKET SCREW** with **3mm allen wrench** to secure **CAGE ASSEMBLY** to **BASE ASSEMBLY**. Ensure **RODS** are secure

