


# QUICK BASE (POCKET)


Included:

- (2) M2 socket cap
- (2) 1/4-20 low profile screw
- (2) 3/8-16 low profile screw
- (1) M1.5 allen wrench
- (1) M3 allen wrench

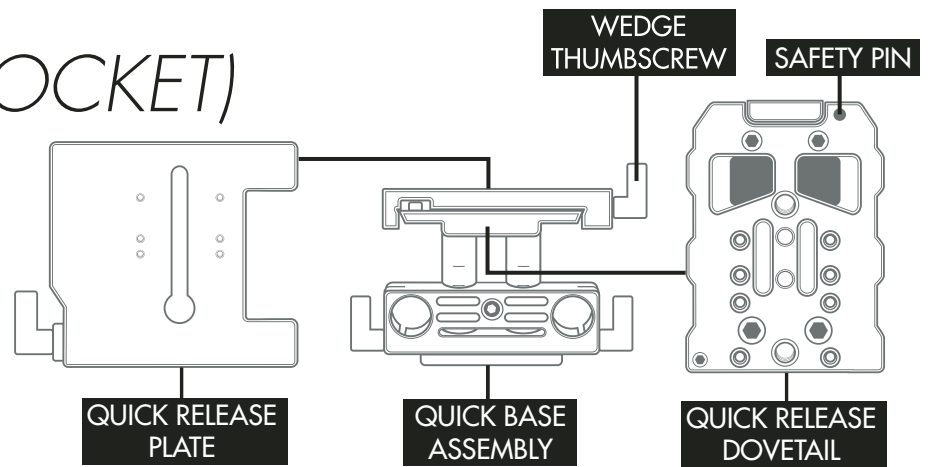


## INSTALLATION (no Pocket Cage)

1. Locate and loosen **WEDGE THUMBSCREW**, press down **SAFETY PIN**, and slide **QR PLATE** back to remove from **QUICK BASE ASSEMBLY**
2. Locate **M2 HOLES** on **QR PLATE**, select and tighten **M2 SOCKET CAPS** with **M1.5 allen wrench**
3. Select and slide **1/4-20 SCREW** into **SCREW CHANNEL**
4. Align **QR PLATE** and **1/4-20 SCREW** to **1/4-20 HOLE** on **CAMERA** bottom, loosely tighten with screwdriver
5. Before final tightening of **1/4-20 SCREW** align **M2 SOCKET CAPS** with camera body near lens mount
6. Locate and loosen **BRACKET SCREW** on **QB ASSEMBLY** with 3mm allen wrench, raise **RODS** to align lower **MARKERS** with top of **BRACKET** for proper lens height
7. Re-tighten **BRACKET SCREW**, attach **QR PLATE** to **QR DOVETAIL**, and tighten **WEDGE THUMBSCREW**

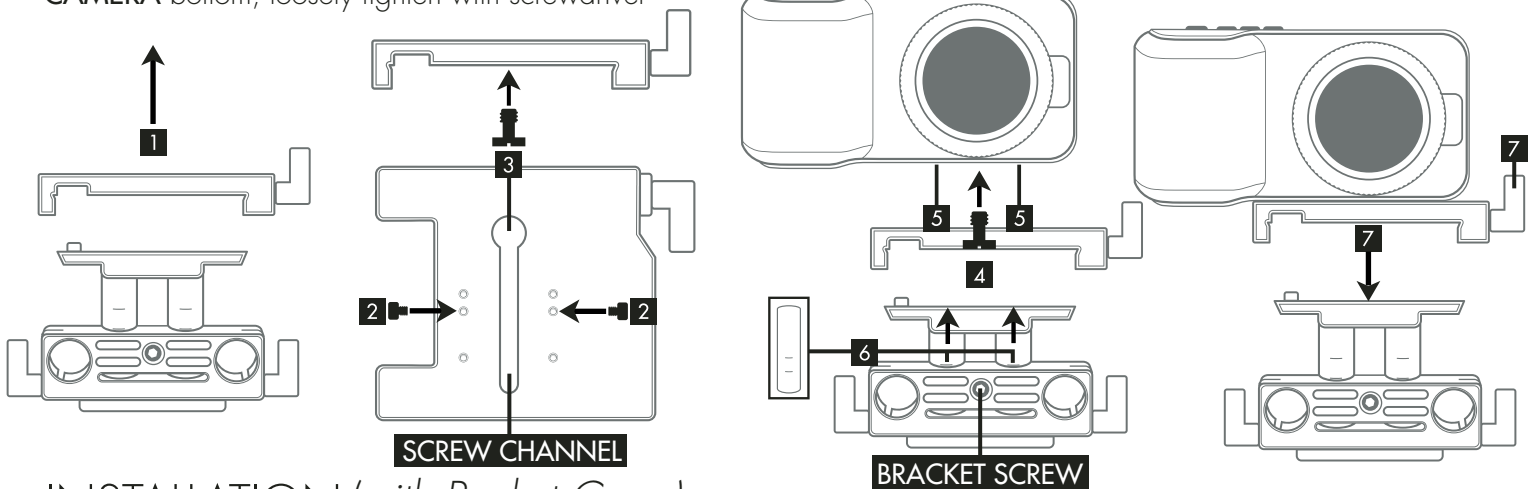

## INSTALLATION (with Pocket Cage)

1. Locate and loosen **WEDGE THUMBSCREW**, press down **SAFETY PIN**, and slide **QR PLATE** back to remove from **QUICK BASE ASSEMBLY**
2. Select **CAGE ASSEMBLY\***, locate **3/8-16 & 1/4-20 HOLES** on **CAGE BOTTOM**
3. Select **3/8-16 & 1/4-20 SCREWS**, starting with **3/8-16 SCREW** slide both screws into **SCREW CHANNEL**
4. Align **PLATE** with **CAGE BOTTOM**, tighten **3/8-16 SCREW** to **3/8-16 HOLE** and **1/4-20 SCREW** to **1/4-20 HOLE**, adjust **CAGE ASSEMBLY** on **QR PLATE** before final tightening
5. Attach **QR PLATE** and **CAGE ASSEMBLY** to **QR DOVETAIL**, tighten **WEDGE THUMBSCREW**

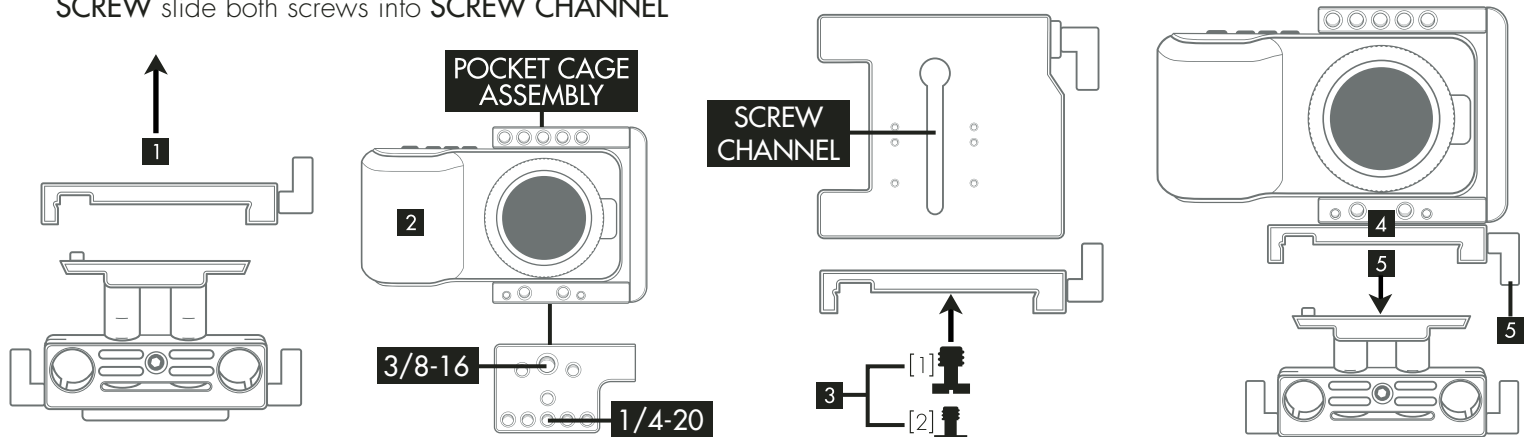

\*NOTE: POCKET CAGE assembly required. See **POCKET CAGE** assembly instructions

© Wooden Camera, Inc. 2011-2013