



POCKET LOCK (POWER)

Included:

(1) M4 socket cap



M3 allen wrench

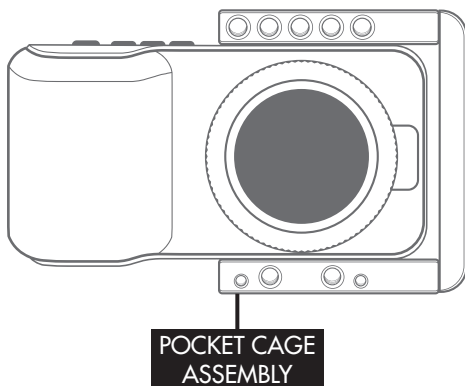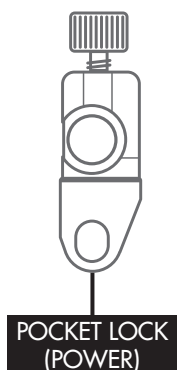

NOTE: POCKET CAGE assembly required.
See POCKET CAGE assembly instructions

INSTALLATION

1. Select **POCKET CAGE ASSEMBLY**, locate **SIDE PLATE**, ensure **M4 HOLES** are facing **CAMERA INPUTS**
2. Locate **M4 HOLE** next to **POWER INPUT**
3. Select **POCKET LOCK (POWER)** and **M4 SOCKET CAP**
4. Center **POCKET LOCK (POWER) HOLE** over **POWER INPUT**, tighten **M4 SOCKET** to **SIDE PLATE** with allen wrench
5. Insert **POWER CORD** into **POWER INPUT** and gently tighten **THUMBSCREW** (Do not overtighten).

