


Video Stabilizer & Automatic Video Optimizer

IVS-200



Various functions were added to our video stabilizer, which corrects video shaking during shooting in real time, and repackaged this product as the IVS-200. While existing video stabilizers can correct vertical and horizontal shaking, this new product also corrects rotation. It also comes with an auto video optimizer (AVO), which automatically corrects of video to appropriate levels. This can dramatically improve the monitoring environment.

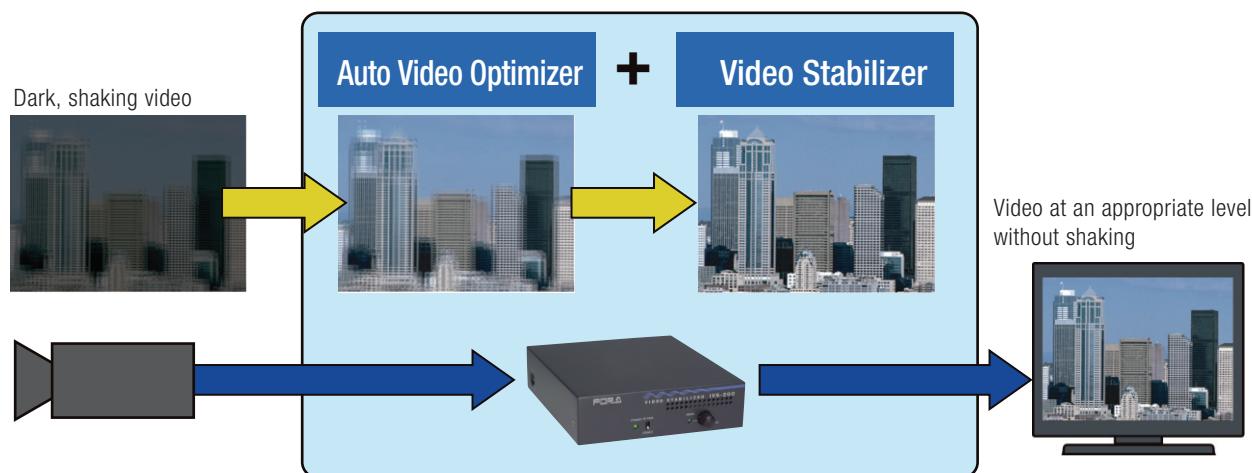

Video stabilizer function

- Shaking images can be corrected in real time
(enlarges and corrects shaking in two dimensions, including vertical, horizontal, diagonal and rotational).
- Panning and zooming can be automatically detected so that only shaking is corrected.
- Because it is a simple design that just needs a video signal input, adding to existing systems is easy and corrections are made in real time.
- Shaking in previously recorded VTR video can also be corrected.
- Up to 40% of the screen can be corrected.
- Achieves sub-pixel level correction precision.
- Masking function: Sets range of video to be processed
(e.g. specify areas other than places where subtitles are superimposed).

Auto video optimizer function

- White and black levels and gamma curves in video are monitored in real time and automatically corrected to normal levels.
- Recognizes bright and dark spots in the video and optimally corrects only those areas needing it, reproducing clear images with a wide dynamic range.
- Range of level adjustment can be set
(e.g. set levels to be corrected in dark areas).


Other functions

- Time display function and title display function
(alphanumeric characters, codes, maximum 16 characters × one line)
- NTSC/PAL automatic recognition function
- Small, portable, DC drive


Specifications

Standard	NTSC or PAL (Auto detect)
Video Input	Analog Composite: 1.0Vp-p, 75Ω, 1 input, BNC
Video Output	Analog Composite: 1.0Vp-p ±0.1V, 75Ω, 2 outputs, BNC (Output 1 has a by pass function)
Sampling Frequency of Detection	1Hz to half of field frequency
Correction Method	Corrects shaking in two dimensions, including vertical, horizontal, diagonal and rotational
Correction Range	Adjustable to max. 40% of image size (16 steps)
Correction Accuracy	Sub-pixel level
AVO Mode	AUTO mode: auto detect / HOLD mode: keep present settings / OFF (selectable at menu)
AVO Level	5 steps
Display Characters	Number of characters: 16 characters, 1 line Characters: Alphabetical, Numeric and Symbol
Time Display	Display format: Display as, year month, date, minutes, seconds(24 hour display) Time accuracy: ±10 seconds or less per month (25°C)
Interfaces	REMOTE: 1 port, 9-pin D-sub (female) Ethernet: 100Base-TX, 1 port, RJ-45
Temperature / Humidity	0°C - 40°C / 30% - 90% (no condensation)
Power /Consumption	13W (at 24VDC)
Dimensions / Weight	145 (W) x 40 (H) x 162 (D) mm / Approx. 850g
Accessories	Operation manual
Option	AC adapter

External Dimensions

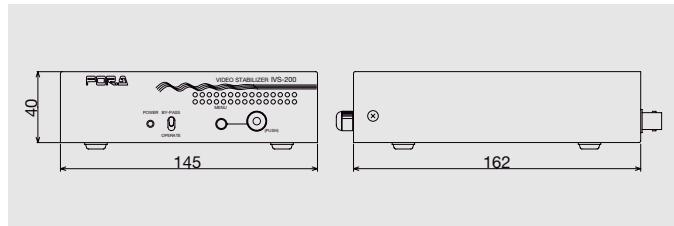


Rear Panel

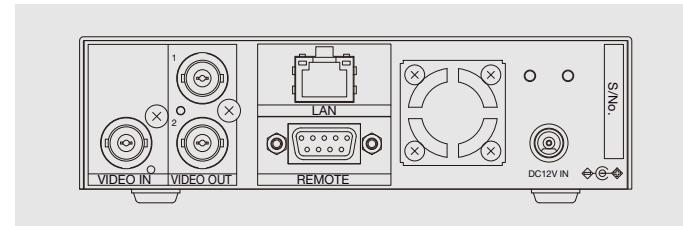

Application

◆ How to set up remove monitoring system via internet

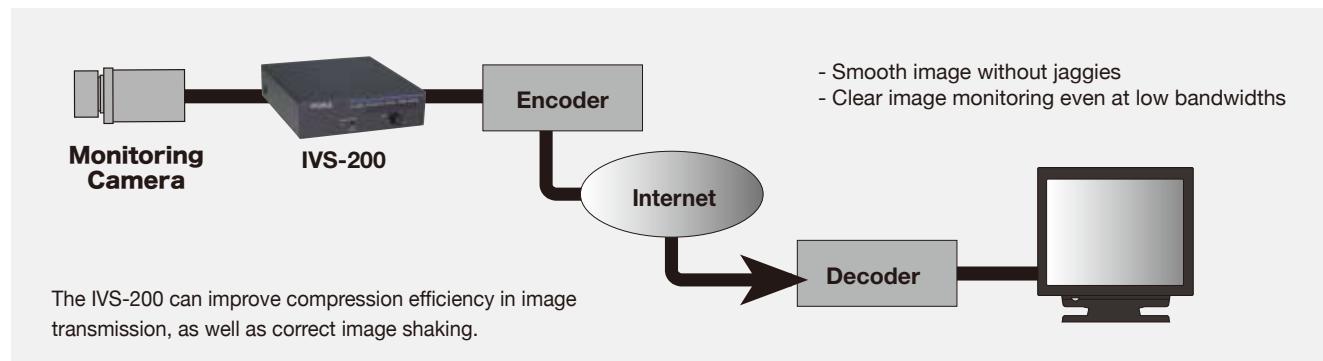

To guard against the effects of salt or corrosive gases, do not use in a corrosive environment (near the sea, etc.). Use protective housing in case of use in a corrosive environment.

FOR-A COMPANY LIMITED

Head Office : 3-8-1 Ebisu, Shibuya-ku, Tokyo 150-0013, Japan

FOR-A America Corporate Office : 11155 Knott Avenue, Suite G&H, Cypress, CA 90630, USA

FOR-A America East Coast Office : 2 Executive Drive, Suite 670, Fort Lee Executive Park, Fort Lee, NJ 07024, USA

FOR-A America Distribution & Service Center : 2400 North East Waldo Road, Gainesville, FL 32609, USA

FOR-A Latin America & the Caribbean : 5200 Blue Lagoon Drive, Suite 760, Miami, FL 33126, USA

FOR-A Corporation of Canada : 346A Queen Street West, Toronto, Ontario M5V 2A2, Canada

FOR-A UK Limited : UNIT C71, Barwell Business Park, Leatherhead Road, Chessington Surrey, KT9 2NY, UK

FOR-A Italia S.r.l. : Via Volturno, 37, 20047, Brugherio MB, Italy

FOR-A Corporation of Korea : 801 Dangsan Building, 53-1 Dangsan-dong, Youngdeungpo-gu, Seoul 150-800, Korea

FOR-A China Limited : 708B Huateng Building, No. 302, 3 Disrcit, Jinsong, Chaoyang, Beijing 100021, China

ISO 9001 and 14001 certified (Sakura R&D)

Homepage: <http://www.for-a.com/>

Tel : +81 (0)3-3446-3936 Fax : +81 (0)3-3446-1470

Tel : +1 714-894-3311 Fax : +1 714-894-5399

Tel : +1 201-944-1120 Fax : +1 201-944-1132

Tel : +1 352-371-1505 Fax : +1 352-378-5320

Tel : +1 305-931-1700 Fax : +1 305-264-7890

Tel : +1 416-977-0343 Fax : +1 416-977-0657

Tel : +44 (0)20-8391-7979 Fax : +44 (0)20-8391-7978

Tel : +39-039-881-086/103 Fax : +39-039-878-140

Tel : +82 (0)2-2637-0761 Fax : +82 (0)2-2637-0760

Tel : +86 (0)10-8721-6023 Fax : +86 (0)10-8721-6033