SHOULDER RIG (MID) Included: 0000000 (2) 1/4-20x3/8 socket cap (2) 1/4-20x3/4 button head 3/16 allen wrench 5/32 allen wrench SHOULDER PAD

INSTALLATION

- 1. Select DOVETAIL, locate SAFETY LATCH and find noted 1/4 HOLES as shown below
- Select and locate SIDE A of SHOULDER PAD to find noted 1/4-20 HOLES as shown below

(2) ROSETTE

HANDLE

- SAFETY LATCH SIDE B SIDE A
- 3. With SIDE A facing SAFETY LATCH, align DOVETAIL over SHOULDER PAD as shown below, select 1/4-20x3/8 SOCKET CAPS, tighten with allen wrench


(2) ROSETTE ARM

SAFETY


DOVETAII

CROSSBAR


4. Select CROSSBAR and 1/4-20x3/4 SCREWS, align components as shown, tighten to DOVETAIL with allen

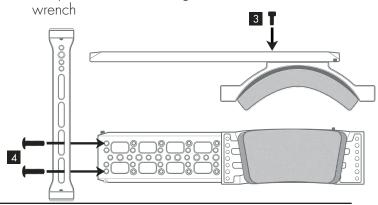

- Select ROSETTE ARMS, attach to CROSSBAR using THUMB SCREWS
- Select HANDLES, attach to ROSETTE ARMS using THUMB SCREWS

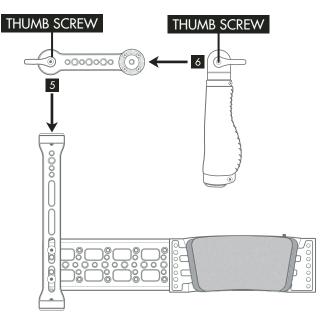

7. Loosen THUMB SCREWS to adjust HANDLES and **ROSETTE ARMS** to desired position

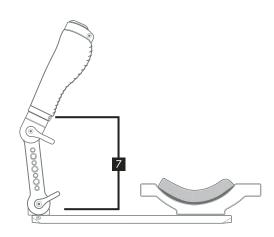



NOTE: THUMB SCREWS can be adjusted by pulling upward and turning to desired position